


Installation and Operating Instructions


Sartorius

IF.. Standard and IF...CE Verifiable Models

Flat-bed Scale

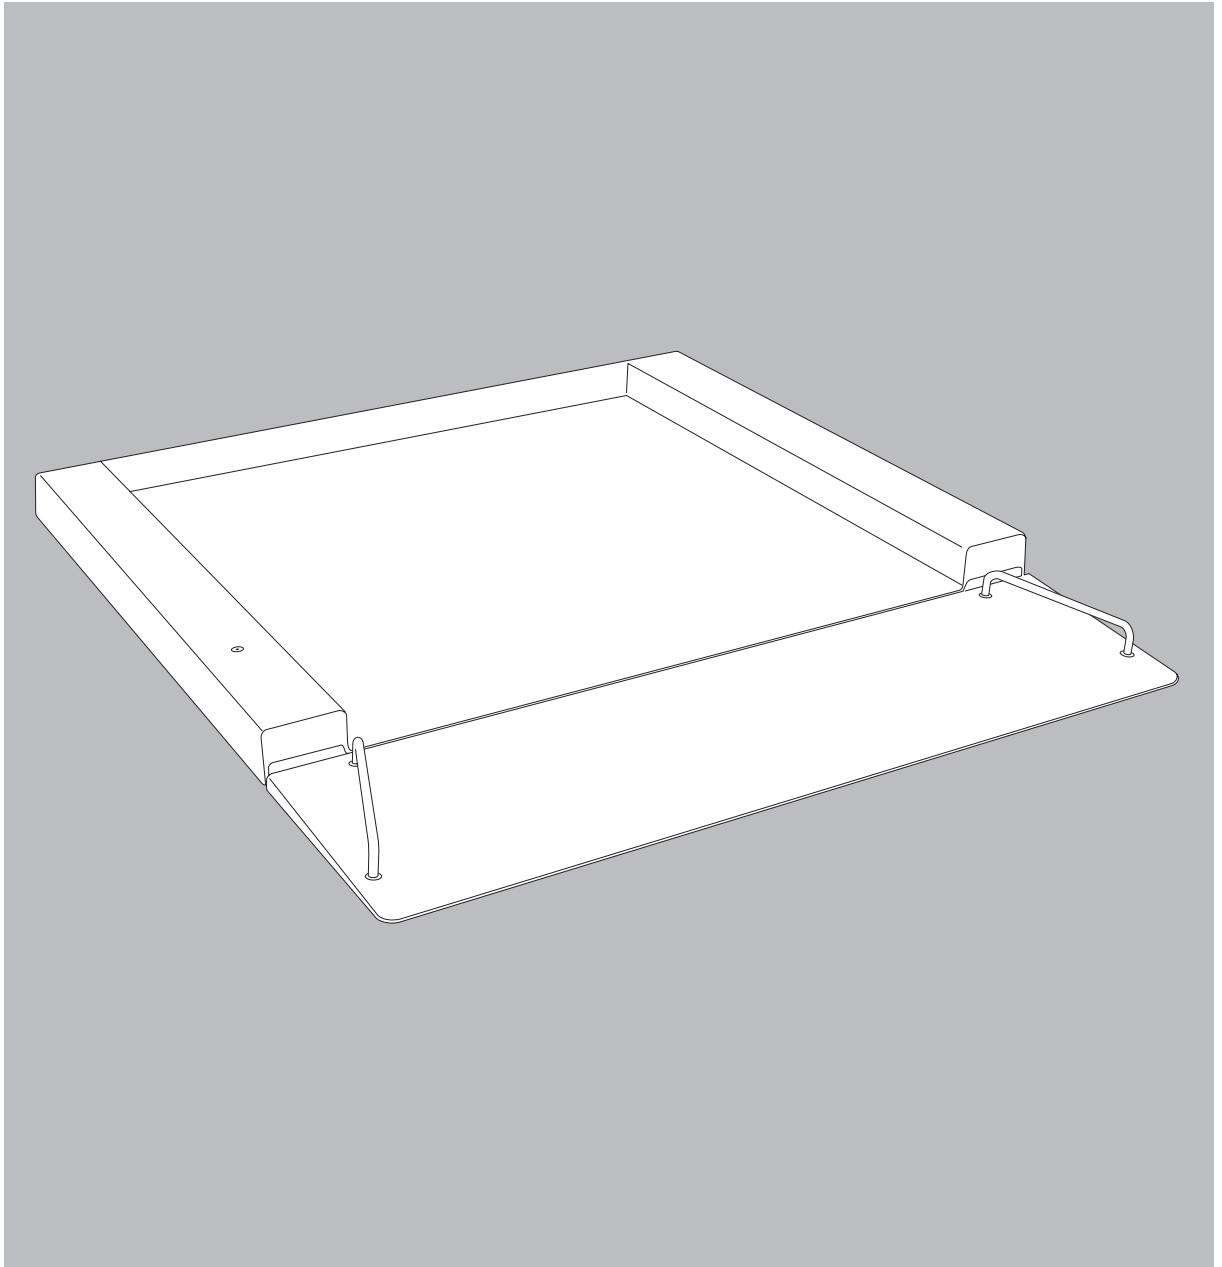

General View of the Equipment

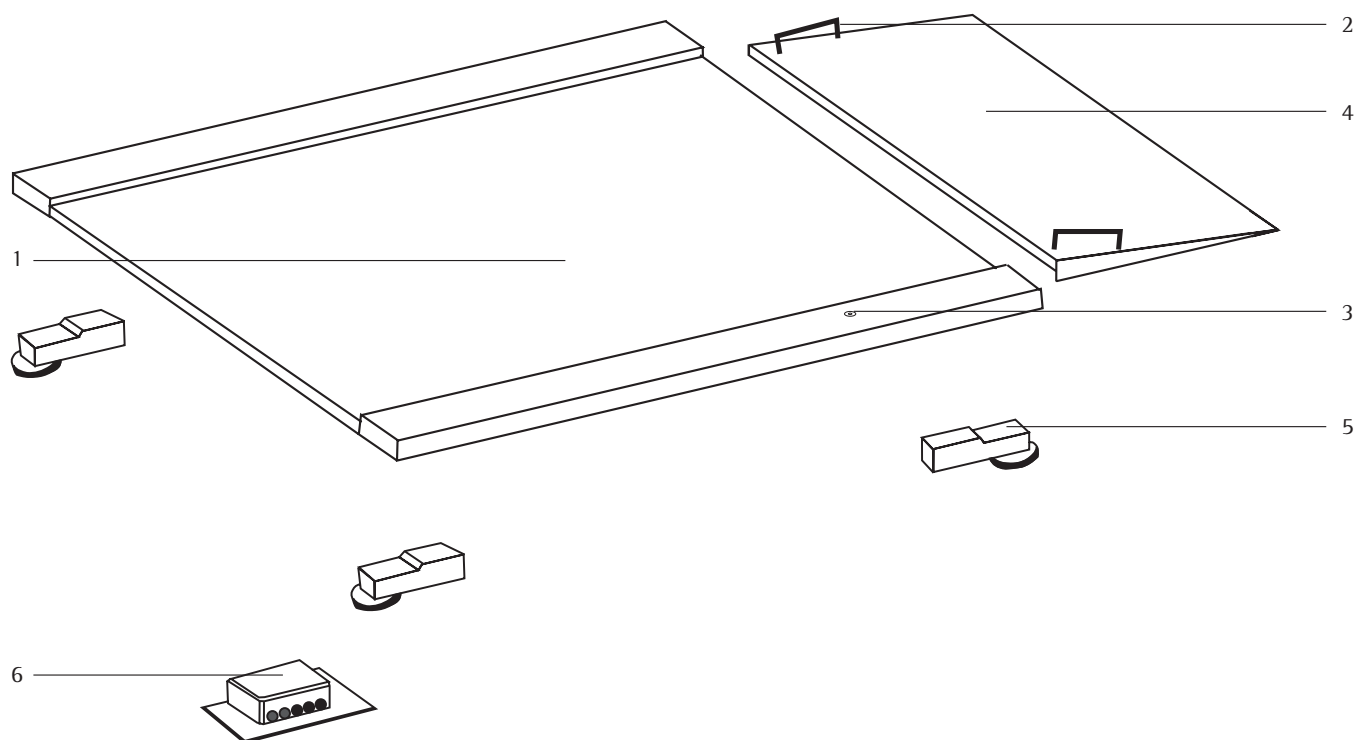

- 1 Weighing platform
- 2 Handles|guide bars
- 3 Level indicator
- 4 Drive-on ramp
- 5 Load cell with load-bearing foot
- 6 Junction box

Contents

2	General View of the Equipment
3	Intended Use
3	Warnings and Safety Precautions
4	Installation Instructions
4	Installation
6	Connecting the IF.. Flat-bed Scale
8	Care and Maintenance
9	Specifications
9	Accessories (Options)
9	Dimensions (Scale Drawings)
10	Declarations of Conformity

The following symbols are used in these instructions:

- indicates required steps
- indicates steps required only under certain conditions
- > describes what happens after you have performed a particular step
- indicates an item in a list
- ⚠ indicates a hazard

Intended Use

The weighing platform is a component of a modular scale, consisting of the weighing platform and an indicator (which is comprised of an analog/digital converter and a display and operator terminal); e.g., a Combics CIS indicator or a QCT01 terminal.

Each component comes with a separate installation and operating manual.

Note:

The verifiable models (“-CE”) can be verified for use as a scale only when connected to a display and control unit/indicator. Read the installation and operating instructions carefully before connecting the IF.. weighing platform and putting it into operation.

Warnings and Safety Precautions

Note:

Improper use or handling can result in damage and/or injury. The flat-bed scale may be installed and operated by qualified personnel only. Make sure you observe the warning and safety information in its entirety during installation and operation, as well as while performing maintenance and repair work on the equipment. The standards, regulations, occupational safety requirements and environmental protection laws valid in your country must be observed. It is important that all personnel using the equipment understand this information, and have access to the relevant documents at all times. Furthermore, the warning and safety information supplied with any electrical equipment connected, such as peripheral devices, must be observed as well. These warnings and safety precautions may have to be supplemented by the equipment operator. All operating personnel must be informed of any additions to these instructions. Make sure the equipment is accessible at all times.

General Provisions for Installing IF.. and IF.. CE Models

The IF.. and IF...CE models meet the EC Directives for electro-magnetic compatibility and electrical safety.

- The IF.. and IF...CE models are not approved for use in hazardous areas, medical facilities, nor areas exposed to potentially explosive materials. Operating the IF.. and IF...CE models beyond the restrictions indicated is not permitted, and is considered use of the equipment for other than its intended purpose. Any installation work that does not conform to the instructions in this manual will result in forfeiture of all claims under the manufacturer's warranty.
- If the equipment housing is opened by anyone other than persons authorized by Sartorius, this will negate its conformity with regulations governing its use and result in forfeiture of all claims under the manufacturer's warranty.
- Installation of the display and control unit/indicator must be performed by a certified electrician who is familiar with the assembly, start-up and operation of the system and with the relevant guidelines and regulations, and has the required qualifications for performing the installation. If you need assistance, contact your Sartorius dealer or the Sartorius Service Center.
- If no interface cable is connected, place a protective cap over the female interface connector.

For the User

- Always make sure the equipment is disconnected from AC power before performing any installation, cleaning, maintenance or repair work on the scale or weighing system.
- If you see any indication that the scale cannot be operated safely (for example, due to damage), turn it off and lock it in a secure place or otherwise prevent use of the equipment for the time being.

Note:

If the scale has been verified, the seals affixed to the equipment indicate that only authorized service technicians are allowed to open the scale and perform maintenance work, so that safe and trouble-free operation of the equipment is ensured and the warranty remains in effect. (IF...CE models can be verified for use in legal metrology only when connected to a display and control unit/indicator, such as the Combics indicator, isi display and control unit, or QCT terminal). If any of the verification seals are damaged, make sure to observe the national regulations and standards applicable in your country in such cases. In some countries, the verification becomes null and void and the equipment must be re-verified.

- Chemicals (e.g., gases or dusts) that can corrode and damage the inside or outside of the device must be kept away from the equipment. Handle the equipment and any accessories in accordance with the IP rating (IP65 or higher) and EN 60529.
- The casing on all connecting cables, as well as the casing on wires inside the equipment housing, is made of PVC. Chemicals that corrode this material must be kept away from these cables. The casing of the power cable is made of rubber.
- Do not expose the scale to aggressive chemical vapors or to extreme temperatures, moisture, shocks, or vibration. The allowable operating temperature range is –10°C to +40°C (+14°F to +104°F). Make sure the place of installation is adequately ventilated to prevent build-up of excessive heat.
- If you use cables purchased from another manufacturer, check the pin assignments in the cable against those specified by Sartorius before connecting the cable to Sartorius equipment, and disconnect any wires that are assigned differently. The operator shall be solely responsible for any damage or injuries that occur when using cables not supplied by Sartorius. Use only genuine Sartorius spare parts.

Installation Instructions

Unpacking the Equipment

- Please read the enclosed operating instructions carefully before putting the scale into operation.
- After unpacking the equipment, please check it immediately for any visible damage.
- If you detect any damage, proceed as directed in under “Safety Inspection” in the chapter entitled “Care and Maintenance.”
- It is a good idea to save the box and all parts of the packaging until you have successfully installed your equipment. Only the original packaging provides the best protection for shipment.
- Before packing your equipment for shipment, unplug all connected cables to prevent damage.

Equipment Supplied

- IF.. weighing platform
- Installation and operating instructions

Requirements for the Place of Installation

- Observe all safety instructions.
The IF.. scale is designed to provide reliable results under normal ambient conditions. When choosing a location to set up the IF.., observe the following so that you will be able to work with added speed and accuracy:
- Set up the IF.. on a stable, even surface. The surface directly beneath the scale should be smooth and dry. The load that can be carried by the chosen work surface must be sufficient for both the weighing platform and any load placed on the platform. Level the scale using the built-in level indicator.

When moving the weighing platform, be sure to observe safety regulations; wear protective clothing (e.g., hardhat, steel-toed boots, etc.).

- Avoid placing the equipment in close proximity to a heater or otherwise exposing it to heat or direct sunlight.
- Protect the IF.. from direct exposure to drafts that come from open windows or doors.
- Avoid exposing the IF.. to excessive vibration.
- Protect the IF.. from aggressive chemical vapors.
- Do not expose the equipment to excessive moisture over long periods. Turn off the power when the system is not in use.

- The allowable operating temperature range is -10°C to +40°C (+14°F to +104°F).
- If there is any indication that the equipment does not function properly (e.g., display remains blank, or no display backlighting) due to damage during transport, disconnect the equipment from power and notify your nearest Sartorius Service Center; see also: “Safety Inspection” in the chapter entitled “Care and Maintenance.”

Shock Resistance

Even though the IF.. scales feature highly rugged construction, there are some limits. Avoid exposing the system to falling objects, side impact, or shocks.

Notes on Integration into Conveyor Systems

Any moving or rotating parts intended to be permanently attached to the IF.. scale must be designed so that they cannot affect the weighing results. For example, rotating mechanisms must be properly balanced. The IF.. must be clear on all sides during weighing so that any dirt or parts that fall will not create a connection between the weighing platform and any permanently mounted preload components. Make sure there are no cables or other objects exerting force on the load plate. Avoid generating static electricity.

Using the IF...CE in Legal Metrology in the EU*

The type-approval certificate for verification applies only to non-automatic weighing instruments. For automatic operation with or without auxiliary measuring devices or equipment, you must comply with the regulations applicable to the place of installation.

Conditioning the Weighing System

Moisture in the air can condense on the surface of a cold weighing instrument or other device whenever it is brought to a substantially warmer place. If you transfer the equipment to a warmer area, make sure to condition it for about 2 hours at room temperature, leaving it unplugged from AC power. Afterwards, if you keep the equipment connected to AC power, the constant positive difference in temperature between the inside of the equipment and the outside will practically rule out the effects of moisture condensation.

Installation

Note:

Connection of the scale to a display and control unit/indicator, installation, configuration, and putting the equipment into operation must be performed by a trained dealer or Sartorius service representative. Details on additional settings are contained in the Sartorius service manual.

- Unplug the power cord from the wall socket (mains) before performing any work on the equipment.
- The special tools indicated must be used when performing installation.
- Installation work that affects the IP65 or IP68 protection rating must be performed with extreme care.
- Any installation work that does not conform to the instructions in this manual will result in forfeiture of all claims under the manufacturer's warranty.
- When installing the equipment in a weighing system, the EU Directive on Machinery (98/37/EC) must be observed.
- Make sure the junction box and load cells do not sustain damage.
- Level the scale using the built-in level indicator.

Note:

Make sure there is a faultless connection between the display and control unit or indicator and the platform (resistance: <1 ohm). The shield must be connected to the cable gland on the A/D converter and to the cable gland on the junction box.

IP Rating

IF.. scales in the galvanized steel version are rated to IP65; stainless steel versions have IP68 protection. The levels of protection indicated by these ratings are as follows:

First digit: rating 6 indicates that the equipment is dust-tight; i.e., completely resistant to penetration by solids. Second digit: rating 5 indicates resistance to penetration by water, including powerful jets of water; rating 8 indicates resistance to ingress of water during complete, continuous submersion in water to a depth of up to 10 meters (approx. 32 feet).

IP65 or IP68 protection is guaranteed only if:

- the seals on the junction box are installed correctly in accordance with industry standards, and
- the connecting cables, protective caps and cable glands were installed and connected by a qualified technician.

* including the Signatories of the Agreement on the European Economic Area


Affixing Equipment Designation Labels to the IF...CE

Equipment designation labels that correspond to configuration of the scale must be affixed to the equipment prior to initial verification. To do this, affix the labels to the display and control unit/indicator or, in special cases, to the plates provided. If plates are required, they are included in the equipment supplied with the display and control unit/indicator. Fasten the plate to the connecting cable between the IF...CE and the display and control unit/indicator.

- Affix the label to the plate.



Connecting the Scale to AC Power

The IF.. scale is powered over the connecting cable from the display and control unit/indicator.

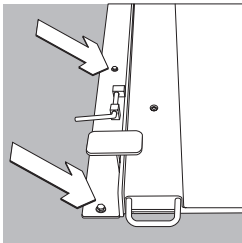

Floor-mounting the IF (Option T8)







- Remove the floor-mounting bracket from the packaging (included when Option T8 is ordered).
- Position the equipment at the desired place of installation.
- Align the stainless steel plates so that they are parallel.
- Mark the positions for drilling the required holes, using the floor-mounting bracket as a template.
- Drill pilot holes using your markings as a guide.
- Move the bracket and flat-bed scale out of the way and drill the holes for the floor-mounting bracket.
- Clean the surface thoroughly.
- Position the scale over the holes and affix it in place with the floor-mounting bracket.
- Make sure to avoid putting strain on any part of the equipment!

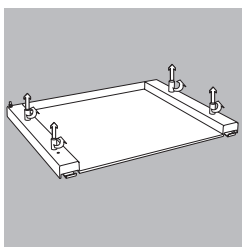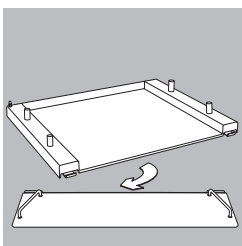

Transporting the IF (Option T7)

- Make sure there is no load on the scale.
- Remove the drive-on ramp from the front of the scale.
- Make sure to observe the safety instructions.

- Remove the threaded caps from the four threaded fasteners and keep them in a safe place.

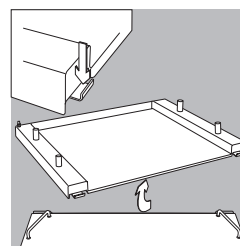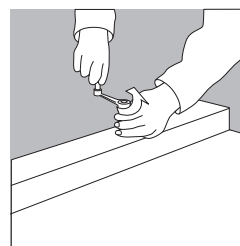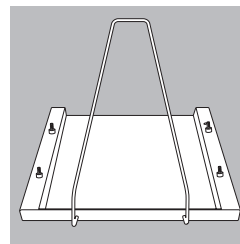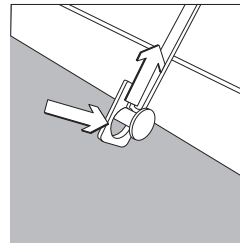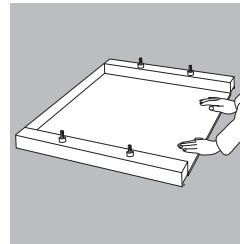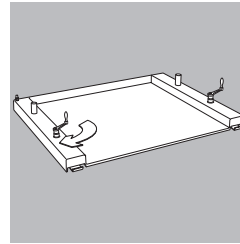

- Attach the two hand cranks to the two threaded fasteners at the front of the scale.
- Turn the cranks clockwise to lower the transport rollers.
- Repeat this procedure for the two rear rollers.

- The scale can now be moved into the desired position.

- If available, fasten the towing bar (optional) as shown.

- The scale can now be pulled into the desired position.
- This procedure is useful, for example, for cleaning the surface beneath the scale at the place of installation.

- Return the weighing platform to the place of installation and retract the rollers.
- Remove the hand crank and replace the four threaded caps.

- Fasten the drive-on ramp to the front of the scale.
- Make sure to observe the safety instructions.

Connecting the IF.. Flat-bed Scale

Connecting Cable: IF.. to Display and Control Unit or Indicator

		Cable: type A	or	Cable: type B
V +	(Supply voltage +)	(white)	or	blue
Sense +	(Supply voltage -)	(brown)	or	black
Signal +	(Output signal +)	(green)	or	white
Signal -	(Output signal -)	(yellow)	or	red
Sense -	(Shield +)	(pink)	or	green
V -	(Shield -)	(gray)	or	gray
Ground	(Shield)			

The IF.. Weighing Platforms

Example of model designation:

IF P 4 1500 RR -LCE


P =
Painted
steel
S =
Stainless
steel

Load cells

Weighing
capacity in kg

Dimensions

Resolution, not verifiable:
15,000 d = L, 30,000 d = I
Verifiable:
3000 e = LCE, 2 × 3000 e = NCE

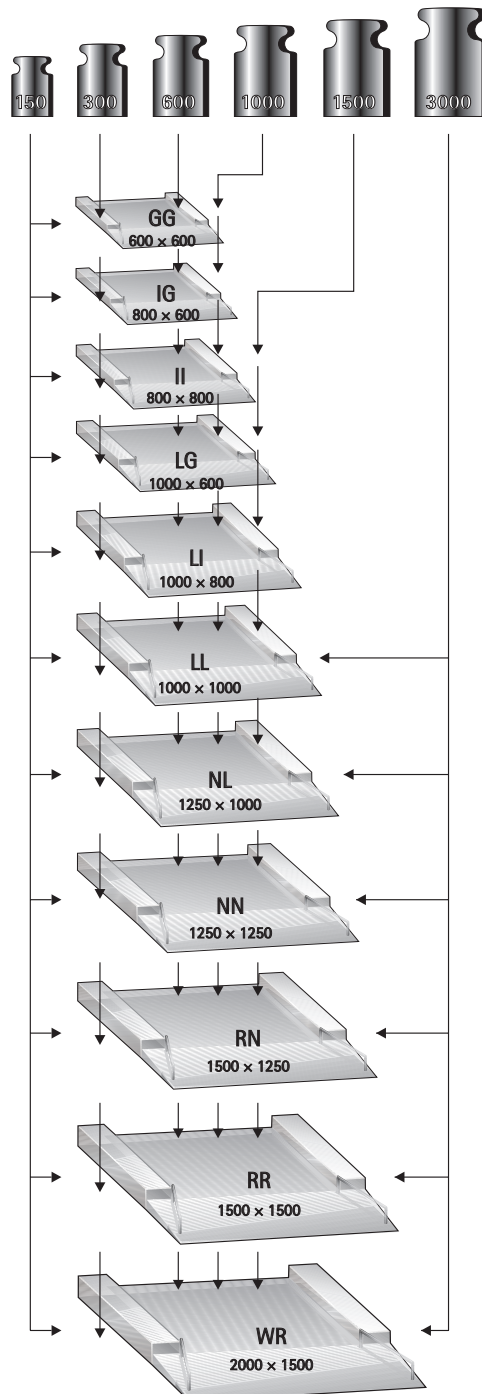

The IF.. Weighing Platforms

Galvanized models:

- Weighing capacities from 150 kg to 3000 kg
- 11 different sizes
- 6 weighing capacities
- 59 models
- 3000 e, 2 × 3000 e Cl. III (depends on model); 15,000 d, 30,000 d
- Surface finishing: painted
- IP65 rating
- Drive-on ramp
- Customized versions possible

Stainless steel models:

- Weighing capacities from 150 kg to 3000 kg
- 11 different sizes
- 6 weighing capacities
- 59 models
- 3000 e, 2 × 3000 e Cl. III (depends on model); 15,000 d, 30,000 d
- Material/surface finishing: AISI 304 or AISI 316 Ti stainless steel, brushed or electropolished
- IP67/IP65 rating
- Stainless steel load cells
- Drive-on ramp; customized versions possible

Care and Maintenance

Service

Regular servicing by a Sartorius technician will extend the service life of your IFL scale or weighing system and help to ensure its continued weighing accuracy. Sartorius can offer you service contracts, with your choice of regular maintenance intervals ranging from 1 month to 2 years.

Repairs

- ⚠ Disconnect defective equipment from power immediately. Repairs may be performed only by authorized Sartorius service technicians using genuine Sartorius parts. Any attempt by untrained persons to perform repairs may result in considerable hazards for the user.
- ⚠ If a cable or cable gland is damaged or defective, replace the cable as a complete unit with all its connectors.

Cleaning


- ⚠ Always handle the equipment in keeping with its IP protection rating. Make sure that no liquid enters the IFL housing.
- Unplug the system from power before cleaning or performing maintenance or repair work. Clean the system regularly to remove all impurities.
- Avoid generating static electricity. Devices rated to IP65 can be rinsed down with a jet of water that strikes the load plate from above.
- ⚠ When using high-pressure cleaning equipment to clean the IFL scale, do not point the jet of steam directly at the load cells.
- > If the water that you use to clean the scale is too hot or too cold, the difference in temperature between the water and the scale can cause condensation inside the scale housing. This condensation can lead to malfunctions in the equipment.

Cleaning Beneath the Load Plate (Option T8)


Important Note:

The load plate must be locked into the vertical position or held in this position by a second person.


Warning: Danger of personal injury! Make sure to observe all warnings and the safety precautions. All personnel must wear steel-toed boots while performing work that involves lifting or raising the load plate.

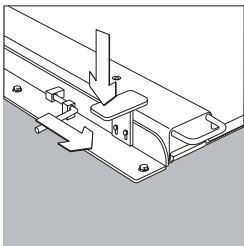


- Use the foot switches on the right and left and lower the safety catch.

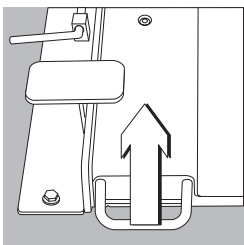

- Use the handle to lift the front of the load plate upwards. Observe all warnings and safety precautions! Important: Lock the load plate into the vertical position.

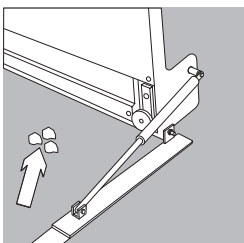

- Clean the area beneath the load plate.

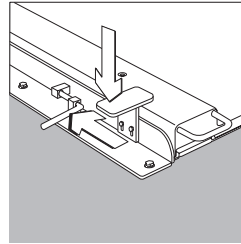

- Unlock the load plate from the vertical position, use the handle to lower the load plate, and secure the safety catches on the right and left.

Cleaning Stainless Steel Surfaces

Clean all stainless steel parts regularly. Use a damp cloth or sponge to clean any stainless steel parts on the system. You can use any commercially available household cleaning agent that is suitable for use on stainless steel. Clean stainless steel surfaces by wiping them down. Then rinse the equipment thoroughly, making sure to remove all residues. Wipe down stainless steel parts again using a clean, damp cloth or sponge. Afterwards, allow the equipment to dry. If desired, you can apply oil to the cleaned surfaces as additional protection.

- ⚠ Do not use stainless steel cleaning agents that contain soda lye (caustic), acetic acid, hydrochloric acid, sulfuric acid or citric acid. The use of scrubbing sponges made with steel wool is not permitted. Solvents are permitted only for cleaning stainless steel parts.

Corrosive Environment

- Remove all traces of corrosive substances on a regular basis.

Safety Inspection

If there is any indication that safe operation of the IFL is no longer warranted; i.e.:

- If there is visible damage to the connecting cable,
- If the device no longer functions properly,
- If the equipment has been stored for a relatively long period under unfavorable conditions, or
- If the equipment has been subjected to rough handling during shipment,
- make sure all safety instructions are observed, and notify your nearest Sartorius Service Center or the International Technical Support Unit based in Goettingen, Germany. Maintenance and repair work may be performed only by authorized Sartorius service technicians who have access to the required maintenance manuals and have received the necessary training.
- ⚠ The seals affixed to this equipment indicate that only authorized service technicians are allowed to open the equipment and perform maintenance work so that safe and trouble-free operation of the equipment is ensured and the warranty remains in effect.

Storage and Shipping Conditions

- The packaging used for shipping your Sartorius equipment is optimally designed to prevent damage during transport. It is a good idea to save the box and all parts of the packaging for future storage or shipment of the equipment. Only the original packaging provides the best protection for shipment.
- Allowable storage temperature: -20°C to +75°C (-4°F to +167°F)
- Allowable humidity during storage: max. 90%
- Please refer to the information under "Warnings and Safety Precautions."

Instructions for Recycling

If you no longer need the packaging after successful installation of the equipment, you should return it for recycling. The packaging is made from environmentally friendly materials and is a valuable source of secondary raw material. Contact your local waste disposal authorities if you wish to scrap the equipment. Sartorius AG in Goettingen will take back equipment and packaging for disposal in accordance with the applicable laws.* If you set up the equipment in a country other than Germany, please contact your local waste disposal authorities for information on similar services.

* This service is offered only within Germany

Specifications

General Specifications for the IF-... Models

Model	IF..	
Allowable ambient operating temperature	°C	-10 to +40 (+14°F to +104°F)
IP rating	IP65 IP68	(painted models) (stainless steel models)

The cables supplied with the weighing platforms as standard equipment are 6 m in length.


Capacities: Up to 3000 kg, with restrictions, when the load is distributed on the load plate.

Accessories (Options)

	Order no.
Additional drive-on ramps	available on request
Frame for pit installation	available on request
For affixing the weighing platform to the floor: Floor-mounting set	YFP011

Columns can be manufactured to order on request.

Dimensions

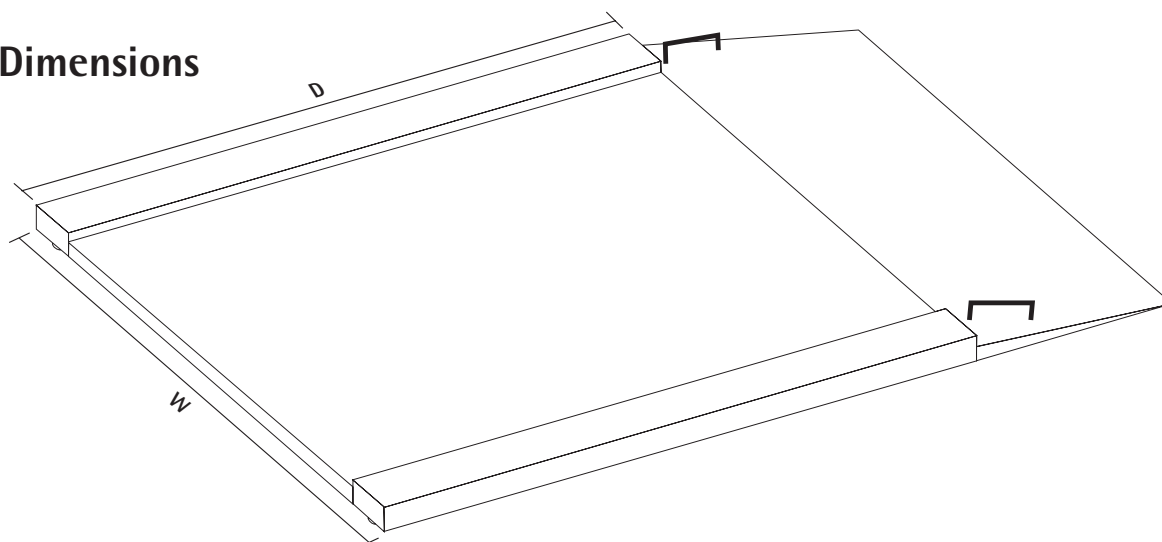

Designation	GG	IG	II	LG	LI	LL	NL	NN	RN	RR	WR
D (mm)	600	800	800	1,000	1,000	1,000	1,250	1,250	1,500	1,500	2,000
W (mm)	600	600	800	600	800	1,000	1,000	1,250	1,250	1,500	1,500

Resolutions

Resolution 1 weighing capacity: -L				Resolution 2 weighing capacities -NCE			
	-I	-LCE				2 × 3,000e	
Weighing capacity in kg	15,000d in g	30,000d in g	1 × 3,000e in g	Weighing capacity 1 in kg	Resolution: Capacity 1 in g	Weighing capacity 2 in kg	Resolution: Capacity 2 in g
150	10	5	50	60	20	150	50
300	20	10	100	150	50	300	100
600	50	20	200	300	100	600	200
1000	100	50	500	600	200	1,000	500
1500	100	50	500	600	200	1,500	500
3000	200	100	1,000	1,500	500	3,000	1,000

Declarations of Conformity

The **CE** marking may be affixed only to equipment that complies with the following Directives (below). Conformity has been tested in conjunction with Sartorius equipment:

**Council Directive 89/336/EEC
"Electromagnetic compatibility (EMC)"
as amended by 93/68/EEC**
Applicable European Standards:

- 1.1 Reference to 89/336/EEC:
Official Journal of the European
Communities, No. 2001/C105/03
- EN 61326-1 Electrical equipment
for measurement,
control and laboratory
use EMC requirements
- Part 1: General requirements
Defined immunity
to interference:
Industrial areas,
continuous, un-mon-
itored operation
Limitation of emis-
sions:
Residential areas,
Class A
- IF....

Note:

The operator shall be responsible for any modifications to the indicator and for any connections of cables or equipment not supplied by Sartorius. On request, Sartorius will provide information on the minimum operating specifications (in accordance with the Standards listed above for defined immunity to interference).

**73/23/EEC "Electrical equipment
designed for use within certain voltage
limits" as amended by 93/68/EEC**
Applicable European Standards:

- EN 60950 Safety of information
technology equipment
including electrical business
equipment
- EN 61010 Safety requirements for
electrical equipment for
measurement, control
and laboratory use
- Part 1: General requirements

**Weighing Instruments for Use
in Legal Metrology: Council Directive
90/384/EEC "Non-automatic weighing
instruments"**

This Directive regulates the determina-
tion of mass in legal metrology.

For the respective Declaration of Type
Conformity for Sartorius weighing
instruments verified for use as legal
measuring instruments that have an
EC Type-Approval Certificate, see
"Declaration of Conformity" in the
instruction manual for the connected
display and control unit/indicator. This
Directive also regulates EC verification
by the manufacturer, provided that an
EC Type-Approval Certificate has been
issued and the manufacturer has been
accredited by an officer of a Notified
Body registered at the Commission of
the European Community for perform-
ing such verification. The legal basis
for EC verification is EC Directive No.
90/384/EEC for non-automatic weigh-
ing instruments, which has been in
effect since January 1, 1993, within
the Single European Market, and the
accreditation of the Quality Manage-
ment System of Sartorius AG by Lower
Saxony's Regional Administrative
Department of Legal Metrology (Nieder-
sächsische Landesverwaltungsamt –
Eichwesen) from February 15, 1993.

"EC Verification" –

A Service Offered by Sartorius

Our service technicians authorized to
perform the verification of your weigh-
ing instruments that are acceptable
for legal metrological verification can
inspect and verify the metrological
specifications at the place of installa-
tion within the Member States of the
European Union and the Signatories
of the Agreement on the European
Economic Area.

Subsequent Verifications within the European Countries

The validity of the verification will
become void in accordance with the
national regulations of the country in
which the weighing instrument is used.
For information on verification and
legal regulations currently applicable in
your country, and to obtain the names
of the persons to contact, please con-
tact your local Sartorius office, dealer
or service center.



Declaration of Type Conformity to Directive No. 90/384/EEC

This declaration is valid for non-automatic electromechanical weighing instruments for use in legal metrology. These weighing instruments have an EC Type-Approval Certificate for verification. The compatibility of the modules has been confirmed by the Physikalisch-Technischen Bundesanstalt (PTB), the German Federal Institute of Physics and Metrology. For a list of the specific platform models, please refer to the Annex.

SARTORIUS AG declares that its weighing instrument types comply with the requirements of the Council Directive on non-automatic weighing instruments, No. 90/384/EEC of 20 June 1990; the associated European Standard "Metrological aspects of non-automatic weighing instruments, no. EN 45501; the amended, currently valid versions of the national laws and decrees concerning legal metrology and verification in the Member States of the European Union, the EU, and the Signatories of the Agreement on the European Economic Area, which have adopted this Council Directive into their national laws; and with the

requirements stipulated on the Type-Approval Certificate for verification.

This Declaration of Type Conformity is valid only if the weighing instrument(s) is(are) the non-modified serial version manufactured by Sartorius, and only if the ID label on the weighing instrument has the CE conformity and the green metrology sticker with the stamped letter "M" (the two-digit number in large print stands for the year in which the mark has been affixed) as well as the number of the Notified Body which performed initial verification.



If these marks are not on the ID label, this Declaration of Type Conformity is not valid. The period of validity of this Declaration of Type Conformity shall expire upon any tampering with, repair or modification of this weighing instrument or, in some Member States, on the date of expiration.

The operator of this weighing instrument shall be responsible for obtaining an authorized renewal of the verification, such as subsequent or periodic verification, of the weighing instrument for use as a legal measuring instrument.

Sartorius AG
37070 Goettingen, Germany
Signed in Göttingen, 01.11.2004

Dr. G. Maaz
(President of the Mechatronics Division)

J. Rehwald
(Head of the Production Department
Mechatronics / Weighing Technology Division)

Annex

P105EI06

OAW-113-2/02.96

20.10.2004

Plattform / Platform IF...-CE in Kombination mit / in combination with SARTORIUS AG....	Typ / Type	EG- Bauartzulassung / EC type-approval
Auswertegerät / <i>Electronic evaluation unit</i> YCO01IS-0CE mit Anzeige- und Bedieneinrichtung / <i>with indicating and operator device</i> isi 10, isi 20 oder / <i>or</i> isi 30	SARTICS	D04-09-015
Auswertegerät / <i>Indicator</i> QCT01.. (incl. QAT01.., SEBT01..)	SARTICS	D04-09-015
Auswertelektronik / <i>Electronic evaluation unit</i> YCO02IS-0CE mit Anzeige- und Bedieneinrichtung / <i>with indicating and operator device</i> isi10.., isi20.., isi30, YAC01.., YAC02.., TN, TN-X oder Computer (in Konformität mit 89/336/EEC) mit Software Sartorius Win Scale (D09-99.15) / <i>or computer (CE conformity according to Council Directive 89/336/EEC) with software Sartorius Win Scale (D09-99.15)</i>	iso-TEST + Prüfschein / <i>Test Certificate</i> YCO02IS-0CE	D97-09-018 + D09-00.28
Auswertegerät / <i>Indicator</i> FCT01-X (incl. SECT01..) Ausnahme für die Kompatibilität: Variante FCT01-XV1 <i>Exception for the compatibility: Variant FCT01-XV1</i>	SARTICS	D04-09-015
Auswertegerät / <i>Indicator</i> TN und / <i>and</i> TN-X (incl. CIS..., CIXS..)	SARTICS	D04-09-015

Plattform / Platform IF...-CE in Kombination mit / in combination with SARTORIUS HAMBURG GmbH....	Typ / Type	EG- Bauartzulassung / EC type-approval
Auswertegerät / <i>Indicator</i> PR1713..., PR5610(X5), PR5710(X6) bei / <i>at</i> U _{exc} = 12V	SARTICS	D04-09-015
Auswertegerät / <i>Indicator</i> PR1730 bei / <i>at</i> U _{exc} = 12V (nur Einbereichswaagen / <i>single range instruments only</i>)	SARTICS	D04-09-015
Auswertegerät / <i>Indicator</i> PR5510/xx (X4) bei / <i>at</i> U _{exc} = 12V	SARTICS	D04-09-015

Gilt nicht bei Verwendung des Wägezellentrennschaltgerätes PR1626_60 für
explosionsgefährdete Bereiche.
*Not valid for use of the intrinsically safe load cell interface PR1626_60 for
hazardous areas.*

- * Beispiel für Modellnamen, der Buchstabe "N" (in ...-NCE) kann durch andere Buchstaben ersetzt
sein z.B: "L" für Einbereichswaagen.
- * *Example of model name, the letter "N" (in ...-NCE) may be replaced by another letter e.g. "L" for
single range instruments.*

Alle Klasse III / all class III

Kabellänge / Cable length ≤ 20 m

20.10.2004

Plattformen mit 4 Wägezellen (Nicht Edelstahl) / Platforms with 4 load cells (not stainless steel):

Modell / Model *	Max (kg) ≤	e (kg)	Min (kg)	Totlast / dead load (kg) ≤	Abmess- ungen / Dimensions (mm) ≤	Einschaltnullstellber- eich + zusätzliche Totlast / Initial zero setting range + additional dead load (kg) ≤	Wägezelle(n) gekennzeichnet / load cell(s) marked	Load cell Zertifikat Nr. / Certificate no.
IFP4-150GG-NCE	60 150	0,02 0,05	0,4 1	51	600 x 600	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFP4-150IG-NCE	60 150	0,02 0,05	0,4 1	61	800 x 600	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFP4-150II-NCE	60 150	0,02 0,05	0,4 1	67	800 x 800	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFP4-150LG-NCE	60 150	0,02 0,05	0,4 1	71	1000 x 600	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFP4-150LI-NCE	60 150	0,02 0,05	0,4 1	77	1000 x 800	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFP4-150LL-NCE	60 150	0,02 0,05	0,4 1	110	1000 x 1000	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFP4-150NL-NCE	60 150	0,02 0,05	0,4 1	120	1250 x 1000	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFP4-150NN-LCE	150	0,05	1	145	1250 x 1250	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-150RN-LCE	150	0,05	1	175	1500 x 1250	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-150RR-LCE	150	0,05	1	200	1500 x 1500	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-150WR-LCE	150	0,05	1	240	2000 x 1500	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-300GG-NCE	150 300	0,05 0,1	1 2	51	600 x 600	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-300IG-NCE	150 300	0,05 0,1	1 2	62	800 x 600	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-300II-NCE	150 300	0,05 0,1	1 2	67	800 x 800	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-300LG-NCE	150 300	0,05 0,1	1 2	71	1000 x 600	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-300LI-NCE	150 300	0,05 0,1	1 2	77	1000 x 800	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-300LL-NCE	150 300	0,05 0,1	1 2	110	1000 x 1000	20	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-300NL-NCE	150 300	0,05 0,1	1 2	120	1250 x 1000	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-300NN-NCE	150 300	0,05 0,1	1 2	145	1250 x 1250	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-300RN-NCE	150 300	0,05 0,1	1 2	175	1500 x 1250	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-300RR-NCE	150 300	0,05 0,1	1 2	200	1500 x 1500	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-300WR-NCE	150 300	0,05 0,1	1 2	240	2000 x 1500	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFP4-600GG-NCE	300 600	0,1 0,2	2 4	51	600 x 600	500	MP58T/454kg-C3MR	D09-04.20 Rev0
IFP4-600IG-NCE	300 600	0,1 0,2	2 4	62	800 x 600	500	MP58T/454kg-C3MR	D09-04.20 Rev0
IFP4-600II-NCE	300 600	0,1 0,2	2 4	67	800 x 800	500	MP58T/454kg-C3MR	D09-04.20 Rev0
IFP4-600LG-NCE	300 600	0,1 0,2	2 4	71	1000 x 600	500	MP58T/454kg-C3MR	D09-04.20 Rev0
IFP4-600LI-NCE	300 600	0,1 0,2	2 4	77	1000 x 800	500	MP58T/454kg-C3MR	D09-04.20 Rev0
IFP4-600LL-NCE	300 600	0,1 0,2	2 4	110	1000 x 1000	500	MP58T/454kg-C3MR	D09-04.20 Rev0
IFP4-600NL-NCE	300 600	0,1 0,2	2 4	120	1250 x 1000	500	MP58T/454kg-C3MR	D09-04.20 Rev0
IFP4-600NN-NCE	300 600	0,1 0,2	2 4	145	1250 x 1250	500	MP58T/454kg-C3MR	D09-04.20 Rev0

20.10.2004

Modell / Model *	Max (kg) ≤	e (kg)	Min (kg)	Totlast / dead load (kg) ≤	Abmess- ungen / Dimensions (mm) ≤	Einschaltnullstellber- eich + zusätzliche Totlast / Initial zero setting range + addi. dead load (kg) ≤	Wägezelle(n) gekennzeichnet / load cell(s) marked	Load cell Zertifikat Nr. / Certificate no.
IFP4-600RN-NCE	300	0,1	2	175	1500 x 1250	500	MP58T/454kg-C3MR	D09-04.20 Rev0
	600	0,2	4					
IFP4-600RR-NCE	300	0,1	2	200	1500 x 1500	500	MP58T/454kg-C3MR	D09-04.20 Rev0
	600	0,2	4					
IFP4-600WR-NCE	300	0,1	2	240	2000 x 1500	500	MP58T/454kg-C3MR	D09-04.20 Rev0
	600	0,2	4					
IFP4-1000GG-NCE	600	0,2	4	51	600 x 600	300	MP58T/454kg-C3MR	D09-04.20 Rev0
	1000	0,5	10					
IFP4-1000IG-NCE	600	0,2	4	62	800 x 600	300	MP58T/454kg-C3MR	D09-04.20 Rev0
	1000	0,5	10					
IFP4-1000II-NCE	600	0,2	4	67	800 x 800	300	MP58T/454kg-C3MR	D09-04.20 Rev0
	1000	0,5	10					
IFP4-1000LG-NCE	600	0,2	4	71	1000 x 600	300	MP58T/454kg-C3MR	D09-04.20 Rev0
	1000	0,5	10					
IFP4-1000LI-NCE	600	0,2	4	77	1000 x 800	300	MP58T/454kg-C3MR	D09-04.20 Rev0
	1000	0,5	10					
IFP4-1000LL-NCE	600	0,2	4	110	1000 x 1000	300	MP58T/454kg-C3MR	D09-04.20 Rev0
	1000	0,5	10					
IFP4-1000NL-NCE	600	0,2	4	120	1250 x 1000	300	MP58T/454kg-C3MR	D09-04.20 Rev0
	1000	0,5	10					
IFP4-1000NN-NCE	600	0,2	4	145	1250 x 1250	300	MP58T/454kg-C3MR	D09-04.20 Rev0
	1000	0,5	10					
IFP4-1000RN-NCE	600	0,2	4	175	1500 x 1250	300	MP58T/454kg-C3MR	D09-04.20 Rev0
	1000	0,5	10					
IFP4-1000RR-NCE	600	0,2	4	200	1500 x 1500	300	MP58T/454kg-C3MR	D09-04.20 Rev0
	1000	0,5	10					
IFP4-1000WR-NCE	600	0,2	4	240	2000 x 1500	300	MP58T/454kg-C3MR	D09-04.20 Rev0
	1000	0,5	10					
IFP4-1500II-NCE	600	0,2	4	67	800 x 800	1500	MP58T/1134kg-C3MR	D09-04.20 Rev0
	1500	0,5	10					
IFP4-1500LG-NCE	600	0,2	4	71	1000 x 600	1500	MP58T/1134kg-C3MR	D09-04.20 Rev0
	1500	0,5	10					
IFP4-1500LI-NCE	600	0,2	4	77	1000 x 800	1500	MP58T/1134kg-C3MR	D09-04.20 Rev0
	1500	0,5	10					
IFP4-1500LL-NCE	600	0,2	4	110	1000 x 1000	1500	MP58T/1134kg-C3MR	D09-04.20 Rev0
	1500	0,5	10					
IFP4-1500NL-NCE	600	0,2	4	120	1250 x 1000	1500	MP58T/1134kg-C3MR	D09-04.20 Rev0
	1500	0,5	10					
IFP4-1500NN-NCE	600	0,2	4	145	1250 x 1250	1500	MP58T/1134kg-C3MR	D09-04.20 Rev0
	1500	0,5	10					
IFP4-1500RN-NCE	600	0,2	4	175	1500 x 1250	1500	MP58T/1134kg-C3MR	D09-04.20 Rev0
	1500	0,5	10					
IFP4-1500RR-NCE	600	0,2	4	200	1500 x 1500	1500	MP58T/1134kg-C3MR	D09-04.20 Rev0
	1500	0,5	10					
IFP4-1500WR-NCE	600	0,2	10	240	2000 x 1500	1500	MP58T/1134kg-C3MR	D09-04.20 Rev0
	1500	0,5	20					
IFP4-3000LL-NCE	1500	0,5	10	110	1000 x 1000	1500	MP58T/2268kg-C3MR	D09-04.20 Rev0
	3000	1	20					
IFP4-3000NL-NCE	1500	0,5	10	120	1250 x 1000	1500	MP58T/2268kg-C3MR	D09-04.20 Rev0
	3000	1	20					
IFP4-3000NN-NCE	1500	0,5	10	145	1250 x 1250	1500	MP58T/2268kg-C3MR	D09-04.20 Rev0
	3000	1	20					
IFP4-3000RN-NCE	1500	0,5	10	175	1500 x 1250	1500	MP58T/2268kg-C3MR	D09-04.20 Rev0
	3000	1	20					
IFP4-3000RR-NCE	1500	0,5	10	200	1500 x 1500	1500	MP58T/2268kg-C3MR	D09-04.20 Rev0
	3000	1	20					
IFP4-3000WR-NCE	1500	0,5	10	240	2000 x 1500	1500	MP58T/2268kg-C3MR	D09-04.20 Rev0
	3000	1	20					

20.10.2004

Plattformen mit 4 Wägezellen (Edelstahl) / Platforms with 4 load cells (stainless steel):

Modell / Model *	Max (kg) ≤	e (kg)	Min (kg)	Totlast / dead load (kg) ≤	Abmess- ungen / Dimensions (mm) ≤	Einschaltnullstellber- eich + zusätzliche Totlast / Initial zero setting range + additional dead load (kg) ≤	Wägezelle(n) gekennzeichnet / load cell(s) marked	Load cell Zertifikat Nr. / Certificate no.
IFS4-150GG-NCE	60 150	0,02 0,05	0,4 1	51	600 x 600	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFS4-150IG-NCE	60 150	0,02 0,05	0,4 1	61	800 x 600	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFS4-150II-NCE	60 150	0,02 0,05	0,4 1	67	800 x 800	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFS4-150LG-NCE	60 150	0,02 0,05	0,4 1	71	1000 x 600	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFS4-150LI-NCE	60 150	0,02 0,05	0,4 1	77	1000 x 800	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFS4-150LL-NCE	60 150	0,02 0,05	0,4 1	110	1000 x 1000	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFS4-150NL-NCE	60 150	0,02 0,05	0,4 1	120	1250 x 1000	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFS4-150NN-LCE	150	0,05	1	145	1250 x 1250	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFS4-150RN-LCE	150	0,05	1	175	1500 x 1250	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFS4-150RR-LCE	150	0,05	1	200	1500 x 1500	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFS4-150WR-LCE	150	0,05	1	240	2000 x 1500	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFS4-300GG-NCE	150 300	0,05 0,1	1 2	51	600 x 600	250	011469/220kg C3	TC6273 Rev1
IFS4-300IG-NCE	150 300	0,05 0,1	1 2	62	800 x 600	250	011469/220kg C3	TC6273 Rev1
IFS4-300II-NCE	150 300	0,05 0,1	1 2	67	800 x 800	250	011469/220kg C3	TC6273 Rev1
IFS4-300LG-NCE	150 300	0,05 0,1	1 2	71	1000 x 600	250	011469/220kg C3	TC6273 Rev1
IFS4-300LI-NCE	150 300	0,05 0,1	1 2	77	1000 x 800	250	011469/220kg C3	TC6273 Rev1
IFS4-300LL-NCE	150 300	0,05 0,1	1 2	110	1000 x 1000	250	011469/220kg C3	TC6273 Rev1
IFS4-300NL-NCE	150 300	0,05 0,1	1 2	120	1250 x 1000	250	011469/220kg C3	TC6273 Rev1
IFS4-300NN-NCE	150 300	0,05 0,1	1 2	145	1250 x 1250	250	011469/220kg C3	TC6273 Rev1
IFS4-300RN-NCE	150 300	0,05 0,1	1 2	175	1500 x 1250	250	011469/220kg C3	TC6273 Rev1
IFS4-300RR-NCE	150 300	0,05 0,1	1 2	200	1500 x 1500	250	011469/220kg C3	TC6273 Rev1
IFS4-300WR-NCE	150 300	0,05 0,1	1 2	240	2000 x 1500	250	011469/220kg C3	TC6273 Rev1
IFS4-600GG-NCE	300 600	0,1 0,2	2 4	51	600 x 600	500	011231/550kg C3	TC6273 Rev1
IFS4-600IG-NCE	300 600	0,1 0,2	2 4	62	800 x 600	500	011231/550kg C3	TC6273 Rev1
IFS4-600II-NCE	300 600	0,1 0,2	2 4	67	800 x 800	500	011231/550kg C3	TC6273 Rev1
IFS4-600LG-NCE	300 600	0,1 0,2	2 4	71	1000 x 600	500	011231/550kg C3	TC6273 Rev1
IFS4-600LI-NCE	300 600	0,1 0,2	2 4	77	1000 x 800	500	011231/550kg C3	TC6273 Rev1
IFS4-600LL-NCE	300 600	0,1 0,2	2 4	110	1000 x 1000	500	011231/550kg C3	TC6273 Rev1
IFS4-600NL-NCE	300 600	0,1 0,2	2 4	120	1250 x 1000	500	011231/550kg C3	TC6273 Rev1
IFS4-600NN-NCE	300 600	0,1 0,2	2 4	145	1250 x 1250	500	011231/550kg C3	TC6273 Rev1

20.10.2004

Modell / Model *	Max (kg) ≤	e (kg)	Min (kg)	Totlast / dead load (kg) ≤	Abmess- ungen / Dimensions (mm) ≤	Einschaltnullstellber- eich + zusätzliche Totlast / Initial zero setting range + addi. dead load (kg) ≤	Wägezelle(n) gekennzeichnet / load cell(s) marked	Load cell Zertifikat Nr. / Certificate no.
IFS4-600RN-NCE	300	0,1	2	175	1500 x 1250	500	011231/550kg C3	TC6273 Rev1
	600	0,2	4					
IFS4-600RR-NCE	300	0,1	2	200	1500 x 1500	500	011231/550kg C3	TC6273 Rev1
	600	0,2	4					
IFS4-600WR-NCE	300	0,1	2	240	2000 x 1500	500	011231/550kg C3	TC6273 Rev1
	600	0,2	4					
IFS4-1000GG-NCE	600	0,2	4	51	600 x 600	300	011231/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFS4-1000IG-NCE	600	0,2	4	62	800 x 600	300	011231/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFS4-1000II-NCE	600	0,2	4	67	800 x 800	300	011231/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFS4-1000LG-NCE	600	0,2	4	71	1000 x 600	300	011231/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFS4-1000LI-NCE	600	0,2	4	77	1000 x 800	300	011231/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFS4-1000LL-NCE	600	0,2	4	110	1000 x 1000	300	011231/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFS4-1000NL-NCE	600	0,2	4	120	1250 x 1000	300	011231/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFS4-1000NN-NCE	600	0,2	4	145	1250 x 1250	300	011231/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFS4-1000RN-NCE	600	0,2	4	175	1500 x 1250	300	011231/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFS4-1000RR-NCE	600	0,2	4	200	1500 x 1500	300	011231/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFS4-1000WR-NCE	600	0,2	4	240	2000 x 1500	300	011231/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFS4-1500II-NCE	600	0,2	4	67	800 x 800	1500	011232/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFS4-1500LG-NCE	600	0,2	4	71	1000 x 600	1500	011232/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFS4-1500LI-NCE	600	0,2	4	77	1000 x 800	1500	011232/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFS4-1500LL-NCE	600	0,2	4	110	1000 x 1000	1500	011232/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFS4-1500NL-NCE	600	0,2	4	120	1250 x 1000	1500	011232/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFS4-1500NN-NCE	600	0,2	4	145	1250 x 1250	1500	011232/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFS4-1500RN-NCE	600	0,2	4	175	1500 x 1250	1500	011232/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFS4-1500RR-NCE	600	0,2	4	200	1500 x 1500	1500	011232/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFS4-1500WR-NCE	600	0,2	10	240	2000 x 1500	1500	011232/1100kg C3	TC6273 Rev1
	1500	0,5	20					
IFS4-3000LL-NCE	1500	0,5	10	110	1000 x 1000	1500	011233/1760kg C3	TC6273 Rev1
	3000	1	20					
IFS4-3000NL-NCE	1500	0,5	10	120	1250 x 1000	1500	011233/1760kg C3	TC6273 Rev1
	3000	1	20					
IFS4-3000NN-NCE	1500	0,5	10	145	1250 x 1250	1500	011233/1760kg C3	TC6273 Rev1
	3000	1	20					
IFS4-3000RN-NCE	1500	0,5	10	175	1500 x 1250	1500	011233/1760kg C3	TC6273 Rev1
	3000	1	20					
IFS4-3000RR-NCE	1500	0,5	10	200	1500 x 1500	1500	011233/1760kg C3	TC6273 Rev1
	3000	1	20					
IFS4-3000WR-NCE	1500	0,5	10	240	2000 x 1500	1500	011233/1760kg C3	TC6273 Rev1
	3000	1	20					

20.10.2004

Plattformen mit 4 Wägezellen (Edelstahl – ATEX Zone1) / Platforms with 4 load cells (stainless steel ATEX zone1):

Modell / Model *	Max (kg) ≤	e (kg)	Min (kg)	Totlast / dead load (kg) ≤	Abmess- ungen / Dimensions (mm) ≤	Einschaltnullstellber eich + zusätzliche Totlast / Initial zero setting range + additional dead load (kg) ≤	Wägezelle(n) gekennzeichnet / load cell(s) marked	Load cell Zertifikat Nr. / Certificate no.
IFXS4-150GG-NCE	60 150	0,02 0,05	0,4 1	51	600 x 600	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFXS4-150IG-NCE	60 150	0,02 0,05	0,4 1	61	800 x 600	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFXS4-150II-NCE	60 150	0,02 0,05	0,4 1	67	800 x 800	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFXS4-150LG-NCE	60 150	0,02 0,05	0,4 1	71	1000 x 600	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFXS4-150LI-NCE	60 150	0,02 0,05	0,4 1	77	1000 x 800	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFXS4-150LL-NCE	60 150	0,02 0,05	0,4 1	110	1000 x 1000	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFXS4-150NL-NCE	60 150	0,02 0,05	0,4 1	120	1250 x 1000	60	MP58T/91kg-C3MR	D09-04.20 Rev0
IFXS4-150NN-LCE	150	0,05	1	145	1250 x 1250	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFXS4-150RN-LCE	150	0,05	1	175	1500 x 1250	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFXS4-150RR-LCE	150	0,05	1	200	1500 x 1500	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFXS4-150WR-LCE	150	0,05	1	240	2000 x 1500	250	MP58T/227kg-C3MR	D09-04.20 Rev0
IFXS4-300GG-NCE	150 300	0,05 0,1	1 2	51	600 x 600	250	011470/220kg C3	TC6273 Rev1
IFXS4-300IG-NCE	150 300	0,05 0,1	1 2	62	800 x 600	250	011470/220kg C3	TC6273 Rev1
IFXS4-300II-NCE	150 300	0,05 0,1	1 2	67	800 x 800	250	011470/220kg C3	TC6273 Rev1
IFXS4-300LG-NCE	150 300	0,05 0,1	1 2	71	1000 x 600	250	011470/220kg C3	TC6273 Rev1
IFXS4-300LI-NCE	150 300	0,05 0,1	1 2	77	1000 x 800	250	011470/220kg C3	TC6273 Rev1
IFXS4-300LL-NCE	150 300	0,05 0,1	1 2	110	1000 x 1000	250	011470/220kg C3	TC6273 Rev1
IFXS4-300NL-NCE	150 300	0,05 0,1	1 2	120	1250 x 1000	250	011470/220kg C3	TC6273 Rev1
IFXS4-300NN-NCE	150 300	0,05 0,1	1 2	145	1250 x 1250	250	011470/220kg C3	TC6273 Rev1
IFXS4-300RN-NCE	150 300	0,05 0,1	1 2	175	1500 x 1250	250	011470/220kg C3	TC6273 Rev1
IFXS4-300RR-NCE	150 300	0,05 0,1	1 2	200	1500 x 1500	250	011470/220kg C3	TC6273 Rev1
IFXS4-300WR-NCE	150 300	0,05 0,1	1 2	240	2000 x 1500	250	011470/220kg C3	TC6273 Rev1
IFXS4-600GG-NCE	300 600	0,1 0,2	2 4	51	600 x 600	500	011309/550kg C3	TC6273 Rev1
IFXS4-600IG-NCE	300 600	0,1 0,2	2 4	62	800 x 600	500	011309/550kg C3	TC6273 Rev1
IFXS4-600II-NCE	300 600	0,1 0,2	2 4	67	800 x 800	500	011309/550kg C3	TC6273 Rev1
IFXS4-600LG-NCE	300 600	0,1 0,2	2 4	71	1000 x 600	500	011309/550kg C3	TC6273 Rev1
IFXS4-600LI-NCE	300 600	0,1 0,2	2 4	77	1000 x 800	500	011309/550kg C3	TC6273 Rev1
IFXS4-600LL-NCE	300 600	0,1 0,2	2 4	110	1000 x 1000	500	011309/550kg C3	TC6273 Rev1
IFXS4-600NL-NCE	300 600	0,1 0,2	2 4	120	1250 x 1000	500	011309/550kg C3	TC6273 Rev1
IFXS4-600NN-NCE	300 600	0,1 0,2	2 4	145	1250 x 1250	500	011309/550kg C3	TC6273 Rev1

20.10.2004

Modell / Model *	Max (kg) ≤	e (kg)	Min (kg)	Totlast / dead load (kg) ≤	Abmess- ungen / Dimensions (mm) ≤	Einschaltnullstellber- eich + zusätzliche Totlast / Initial zero setting range + additional dead load (kg) ≤	Wägezelle(n) gekennzeichnet / load cell(s) marked	Load cell Zertifikat Nr. / Certificate no.
IFXS4-600RN-NCE	300	0,1	2	175	1500 x 1250	500	011309/550kg C3	TC6273 Rev1
	600	0,2	4					
IFXS4-600RR-NCE	300	0,1	2	200	1500 x 1500	500	011309/550kg C3	TC6273 Rev1
	600	0,2	4					
IFXS4-600WR-NCE	300	0,1	2	240	2000 x 1500	500	011309/550kg C3	TC6273 Rev1
	600	0,2	4					
IFXS4-1000GG-NCE	600	0,2	4	51	600 x 600	300	011309/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFXS4-1000IG-NCE	600	0,2	4	62	800 x 600	300	011309/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFXS4-1000II-NCE	600	0,2	4	67	800 x 800	300	011309/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFXS4-1000LG-NCE	600	0,2	4	71	1000 x 600	300	011309/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFXS4-1000LI-NCE	600	0,2	4	77	1000 x 800	300	011309/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFXS4-1000LL-NCE	600	0,2	4	110	1000 x 1000	300	011309/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFXS4-1000NL-NCE	600	0,2	4	120	1250 x 1000	300	011309/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFXS4-1000NN-NCE	600	0,2	4	145	1250 x 1250	300	011309/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFXS4-1000RN-NCE	600	0,2	4	175	1500 x 1250	300	011309/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFXS4-1000RR-NCE	600	0,2	4	200	1500 x 1500	300	011309/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFXS4-1000WR-NCE	600	0,2	4	240	2000 x 1500	300	011309/550kg C3	TC6273 Rev1
	1000	0,5	10					
IFXS4-1500II-NCE	600	0,2	4	67	800 x 800	1500	011310/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFXS4-1500LG-NCE	600	0,2	4	71	1000 x 600	1500	011310/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFXS4-1500LI-NCE	600	0,2	4	77	1000 x 800	1500	011310/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFXS4-1500LL-NCE	600	0,2	4	110	1000 x 1000	1500	011310/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFXS4-1500NL-NCE	600	0,2	4	120	1250 x 1000	1500	011310/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFXS4-1500NN-NCE	600	0,2	4	145	1250 x 1250	1500	011310/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFXS4-1500RN-NCE	600	0,2	4	175	1500 x 1250	1500	011310/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFXS4-1500RR-NCE	600	0,2	4	200	1500 x 1500	1500	011310/1100kg C3	TC6273 Rev1
	1500	0,5	10					
IFXS4-1500WR-NCE	600	0,2	10	240	2000 x 1500	1500	011310/1100kg C3	TC6273 Rev1
	1500	0,5	20					
IFXS4-3000LL-NCE	1500	0,5	10	110	1000 x 1000	1500	011311/1760kg C3	TC6273 Rev1
	3000	1	20					
IFXS4-3000NL-NCE	1500	0,5	10	120	1250 x 1000	1500	011311/1760kg C3	TC6273 Rev1
	3000	1	20					
IFXS4-3000NN-NCE	1500	0,5	10	145	1250 x 1250	1500	011311/1760kg C3	TC6273 Rev1
	3000	1	20					
IFXS4-3000RN-NCE	1500	0,5	10	175	1500 x 1250	1500	011311/1760kg C3	TC6273 Rev1
	3000	1	20					
IFXS4-3000RR-NCE	1500	0,5	10	200	1500 x 1500	1500	011311/1760kg C3	TC6273 Rev1
	3000	1	20					
IFXS4-3000WR-NCE	1500	0,5	10	240	2000 x 1500	1500	011311/1760kg C3	TC6273 Rev1
	3000	1	20					

Sartorius AG
Weender Landstrasse 94–108
37075 Goettingen, Germany

Phone +49.551.308.0
Fax +49.551.308.3289
www.sartorius.com

Copyright by Sartorius AG,
Goettingen, Germany.
All rights reserved. No part
of this publication may
be reprinted or translated in
any form or by any means
without the prior written
permission of Sartorius AG.
The status of the information,
specifications and illustrations
in this manual is indicated
by the date given below.
Sartorius AG reserves the
right to make changes to
the technology, features,
specifications and design of
the equipment without notice.

Status:
November 2004, Sartorius AG,
Goettingen, Germany